

User Guide - FLCT4WZ

RF Control - 4 Zone RGB + CCT Remote



Features

- 1 Zone Touch panel compatible with our RF (FLDC5Z) receivers.
- Sensitive RGB + tunable white touch colour wheel
- 2.4GHz wireless technology, control distance up to 30m.
- When used as an RF controller it can be Paired with multiple receivers.
- LED light indicator on the remote.

Technical Parameters

- Output signal: RF(2.4GHz)
- Working voltage: 3VDC(AAA)
- Working current: <5mA
- Standby current: <10µA
- Standby time: 2 years
- Remote distance up to 30m within Free Range. Please allow for 12m within areas restricted by obstacles.
- Working temperature: -30°C ~55°C
- Dimensions: L122×W53×H17.5mm
- Weight: 60g

Operation

- When the remote is On, the indicator will display blue. When Off, the indicator will display red.
- When touching the colour wheel, the indicator will display the chosen colour.
- If the operation is invalid, the indicator will display red.
- The touch wheel will enter into sleep mode after several seconds of inactivity. To quit sleep mode, touch any key or colour wheel.

Pairing Guide

Pair the controller with our 2.4G RF receiver (FLDC5Z). There are two pairing methods:

- Using the "Match Key"

Match the controller with our receiver (Using the Match Key on the receiver)

1. Match: Short press the match key, then press the zone key on the remote within 5s.
2. To Delete a Match: Long press the match key on the receiver for 5s.

- At Power Up

Match the controller with our receiver (Without using the Match Key)

1. Match: Switch off receiver power, then switch on power again, short press zone key 3 times on the remote quickly within 5s after receiver power on, the link has been completed once the connected LED lights flash 3 times.
2. To Delete a match: Switch off power to the receiver, then switch on power again, short press the zone key you are deleting 5 times on the remote within 5s after power on, the unlink has been completed once the connected LED lights flash 5 times.

Key Functions



4 Zone remote:

1 2 3 4 + **▶** : RGB+CCT

Hold down **1** + **▶** keys for 2s to set zone 1 as RGB + CTT.

Repeat with the other Zones. The green light on the remote will confirm the setting.

⏻ : Short press to turn On/Off all lights.

🌈 : Touch to change the RGB colour or white light temperature. Press the RGB or CCT key to switch between the RGB and CCT touch wheel.

1 2 3 4 : Short press to select and turn a zone On. Hold the zone key for 2s to switch the lights off in that zone.

*** *** : Adjust the RGB or color temperature brightness,

🔒 : Short press for the next dynamic mode.

▶ : Short press for dynamic RGB mode and to adjust the speed.

S1 S2 : Short press to recall a saved scene or hold key 2 seconds to save the current scene into S1/2. The LED indicator will turn green to confirm the saved scene.

Dimensions

